

1

Pre Drill Ceiling & Walls  
for mounting brackets  
and suspensions - See  
Bracket spacing on back  
of card

2


Add SP129 in the top Channel  
for every suspension, Ceiling,  
or wall bracket



3

Select your mounting  
hardware

To see a video format of the step by step tutorial,  
please use the QR code here!

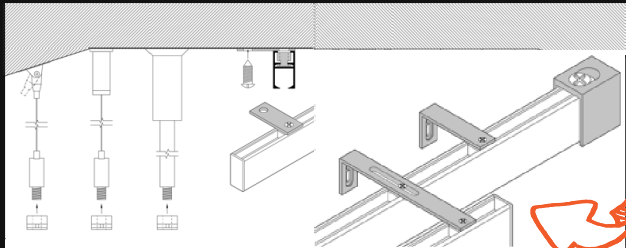


**Note:**

**\*Add Suspension Rod every 24"**

**\*When using Wall supports:**

**WB12 - WBL4 - WBL8 - SB12 Ceiling bracket you can space out suspensions further apart. 36"- 48" depending on Fabric weight and number of above brackets.**

**\*Add Additional Suspension at the ends and on where there are curves & If Needed: on stack side**

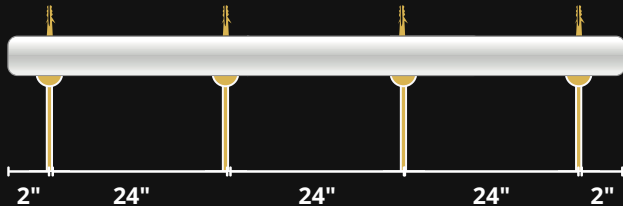

**BREDA**  
Architectural Metals

24 Johnson Ave  
Hackensack, NJ 07061  
info@bredametals.com  
201.940.3300